


ECOFLEX
PAVEMENT SIGN
INSTRUCTION SHEET



PRINTING GUIDELINES

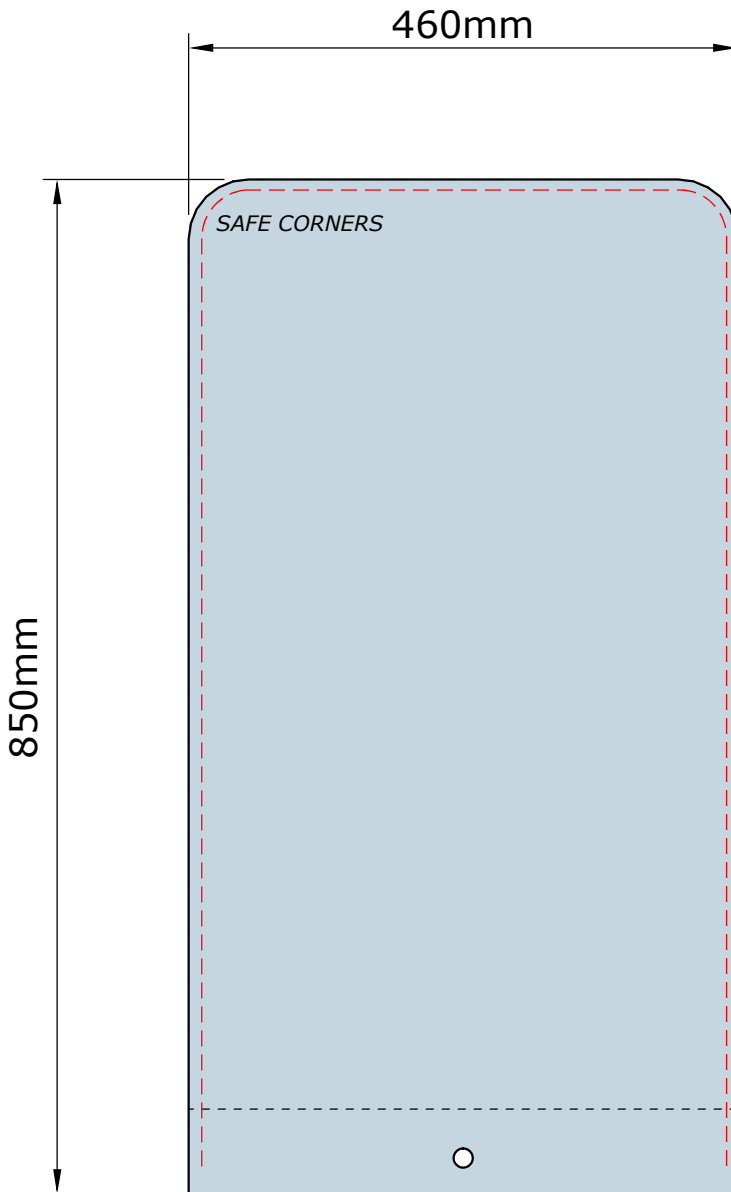

If the job is to be **DIGITALLY PRINTED**, please set the artwork up to the outer **BLACK** keyline and add 2mm bleed all around the panel.

If the Job is to be **SCREEN PRINTED**, please set the artwork up to the inner, **RED** keyline (due to screen printing restrictions, this will leave a 3mm white border all the way around the panel.)

70mm

Please note: This area underneath is not visible when panel slots into base.

Do not place any important design elements here.




COMPONENTS




1X



1X

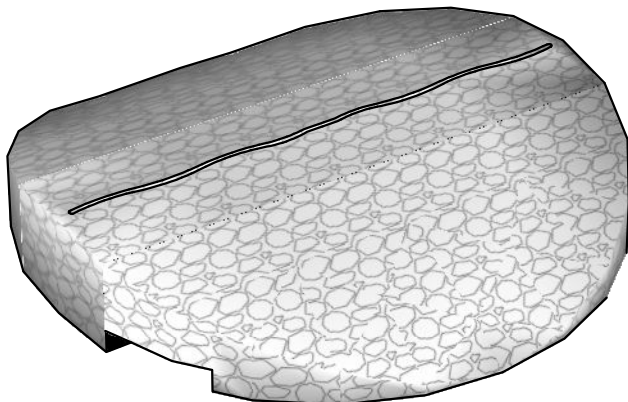


1X

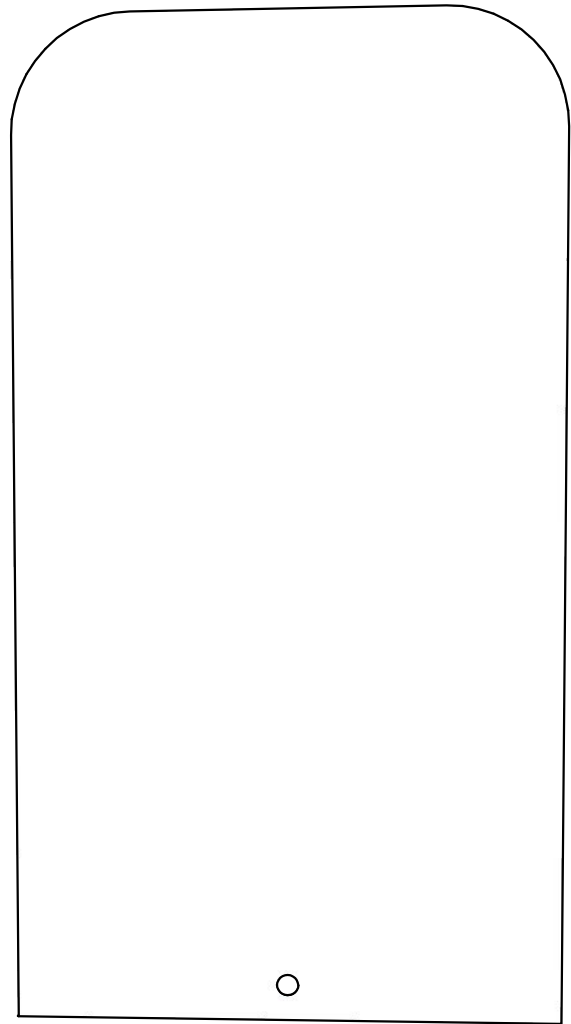


1X


STEP 1

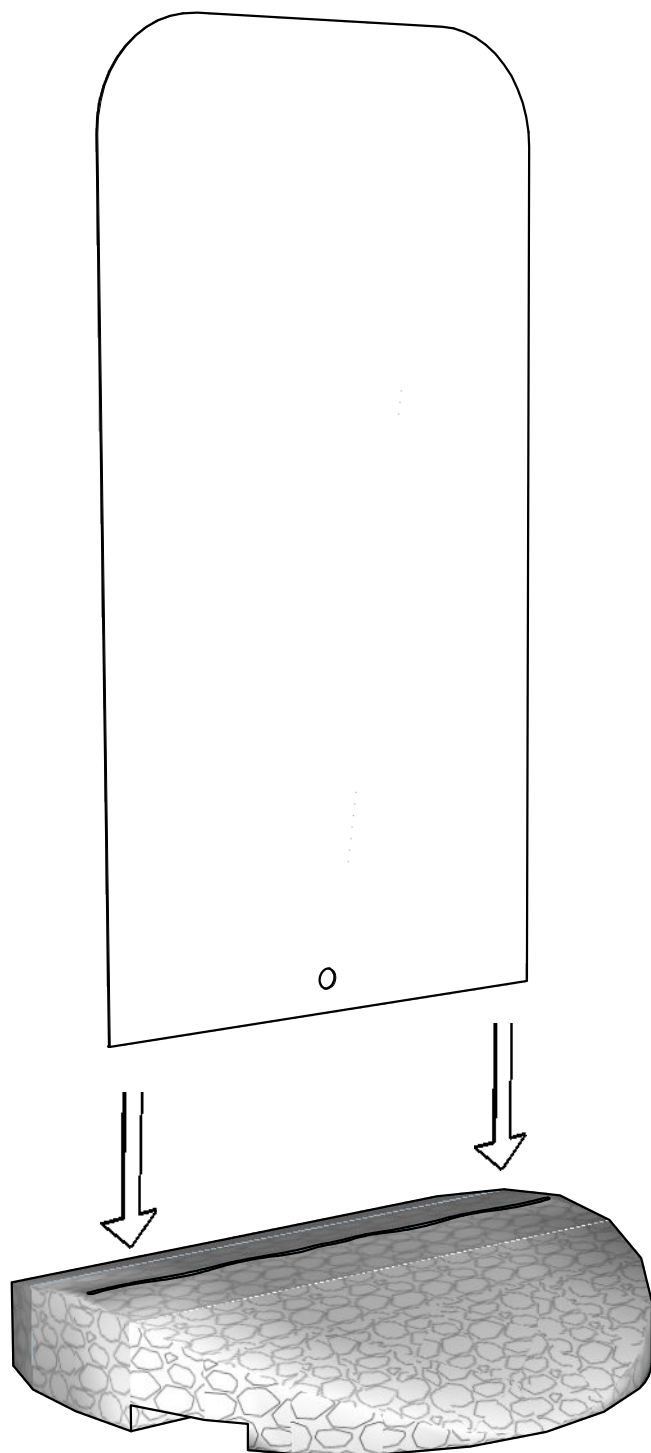

STEP 2 & 3

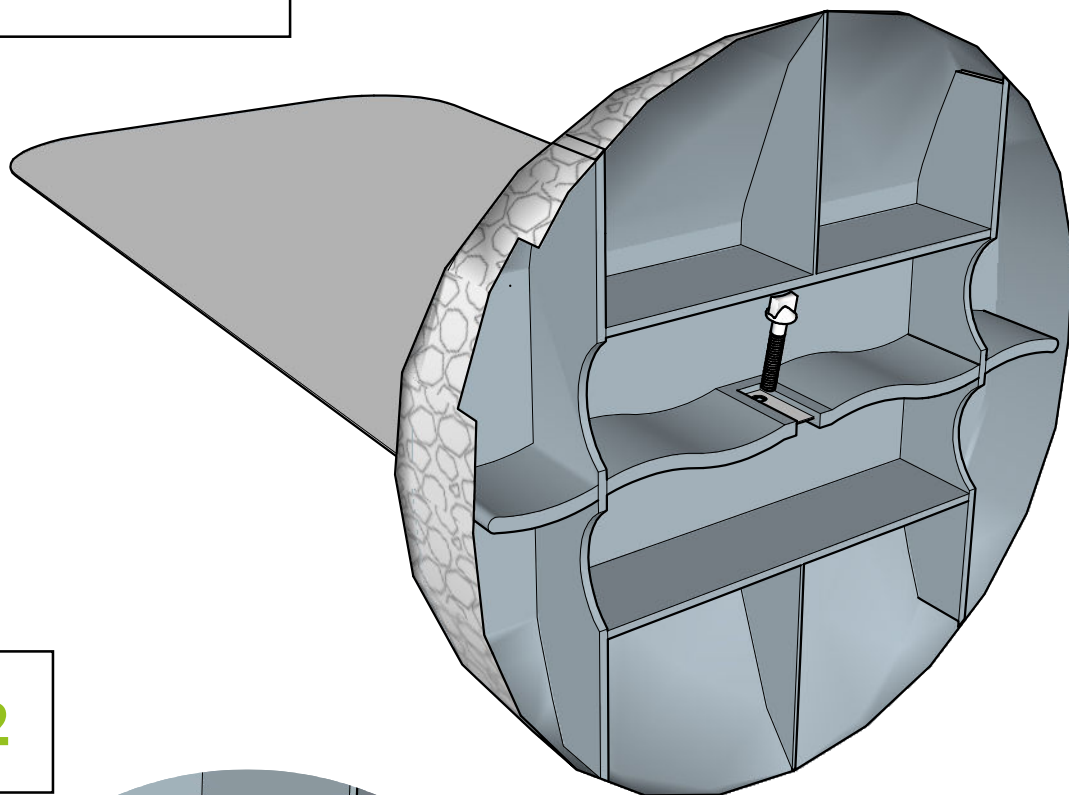

2

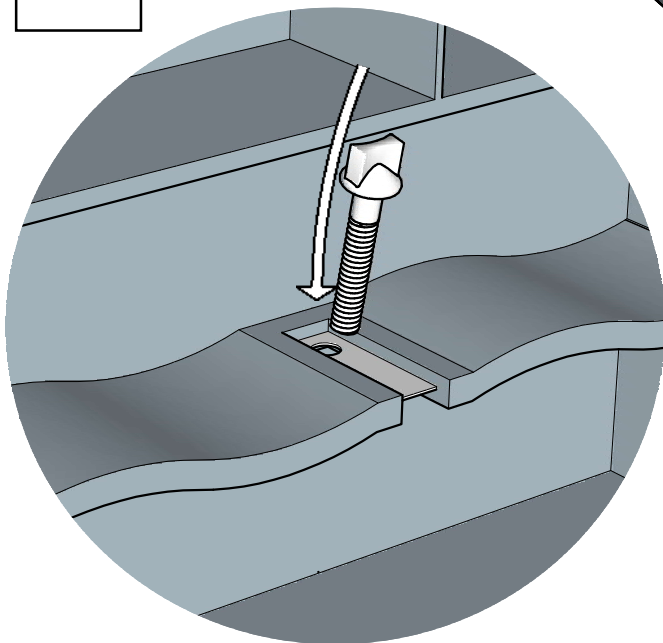

3

