




1 Unscrew the top bolt using a 10mm hex key



2 Repeat the previous step for the bottom bolt



3 The base will easily detach from the aluminium rods

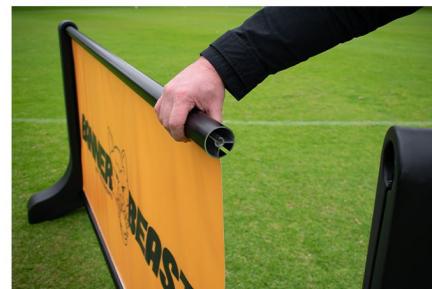

4 Slide the keder (banner) or the panel through the top and bottom channel

5 Attach the bases into the aluminium rods

6 Screw the top bolt using a 10mm hex key



7 Screw the bottom bolt using a 10mm hex key

8 Using an hex key, unscrew the water cap and fill up the bases

9 **DONE!**