

INTRODUCTION

Our self-adhesive offerings ensure easy, clean installations. They create a durable, long-lasting bond with the wall that can also be easily removed. To achieve optimal results with your self-adhesive wallpaper, please follow the installation guidelines below.

**NOT SUITABLE FOR HEAVILY
TEXTURED PAINTS**


RECOMMENDATIONS

For the best results when applying our self-adhesive wallpaper, please adhere to the following guidelines:


- Newly painted walls should be allowed to dry for a period of 4 weeks before application. Be sure to consult the paint manufacturer's instructions for specific guidance in this regard.
- Prior to application, ensure that the wall is flat, clean, smooth, and completely dry.
- It's essential to acclimatise the wallpaper in the room where it will be applied for a minimum of 48 hours before installation.
- Always conduct a compatibility test before proceeding with the application to ensure it meets your requirements.
- In the case of **damaged walls**, we recommend using a water-based primer/sealant before proceeding with the wallpaper installation. This will help ensure a smooth and successful application.

Following these guidelines will help you achieve the best results when using our self-adhesive wallpaper products.


STEP-BY-STEP GUIDE

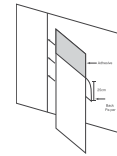


- 1** Remove approx. 25cm of backing paper to expose the adhesive

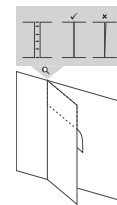


- 2** Line the edge of the paper up with the edge of the first panel

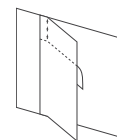


- 3** Apply pressure to the joint to fix it to the wall

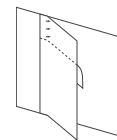


- 4** Moving from left to right apply pressure to the rest of the panel, fixing it to the wall

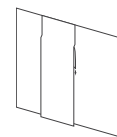

- 5** Remove a further 25cm of backing paper

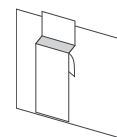

- 6** Apply pressure left to right, fixing the panel to the wall

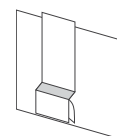

- 7** Repeat the process until the panel has been applied

RECOMMENDED TOOLS

- Squeegee
- Utility knife
- Spirit level
- Straight edge ruler
- Pencil

SURFACE PREPARATION

- Ensure wall is clean, free from dust, dirt or grease
- If wiping with a wet cloth, allow walls to dry before application

FIRST PANEL INSTRUCTIONS

1. Use a spirit level and a pencil to mark a vertical line on the wall, equal to the width of one panel. This line will serve as a guide to hang the first panel as straight as possible.
2. Begin by removing approximately 25 cm of the backing paper from the first panel. Position the panel carefully along the marked vertical line to ensure it's in the correct position.
3. Apply adhesive to the wall where the panel will be placed, ensuring even coverage and using plenty of pressure.
4. As you place the panel on the adhesive, use a squeegee to remove any trapped pockets of air from behind the panel. This step is crucial to ensure a smooth and bubble-free installation.
5. Make sure the edges of the panel are firmly sealed flat against the wall.
6. Continue this process by removing another 25 cm of backing paper and applying the next section of the panel to the wall.
7. Repeat step 6 for each subsequent panel, maintaining alignment with the marked vertical line.

REPEAT STEP 4 AFTER ONE WEEK FOR LONGER LASTING RESULTS